




# Samsung Galaxy Camera 2 Screen Replacement

Smashed your screen? We've got you covered.

Written By: Alexander De La Cruz

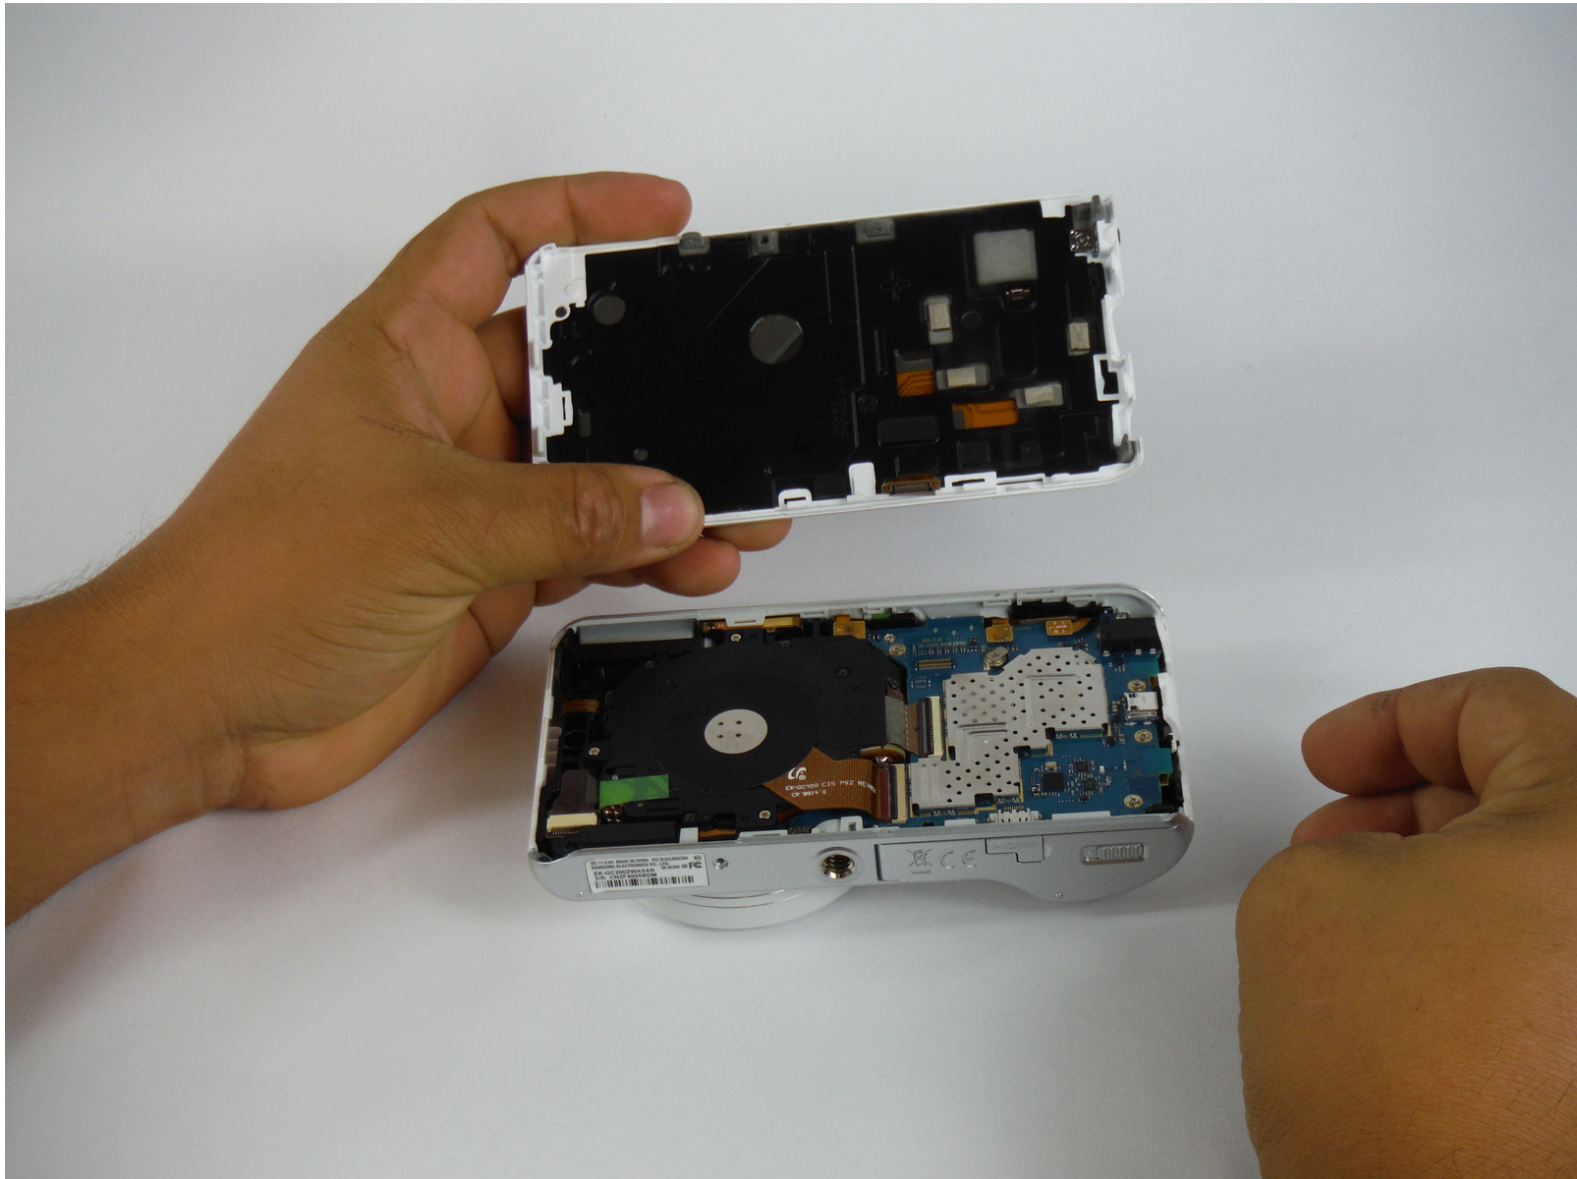

## INTRODUCTION

In this replacement guide, you will be tasked with removing the screen. If your screen is cracked, make sure to handle the part with care, as some pieces of glass could fall off. To prevent this, put clear packing tape over the screen to keep it intact. Always remember to remove the battery before you take the camera apart.



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:


- [Samsung Galaxy camera 2 replacement screen](#) (1)

## Step 1 — Battery

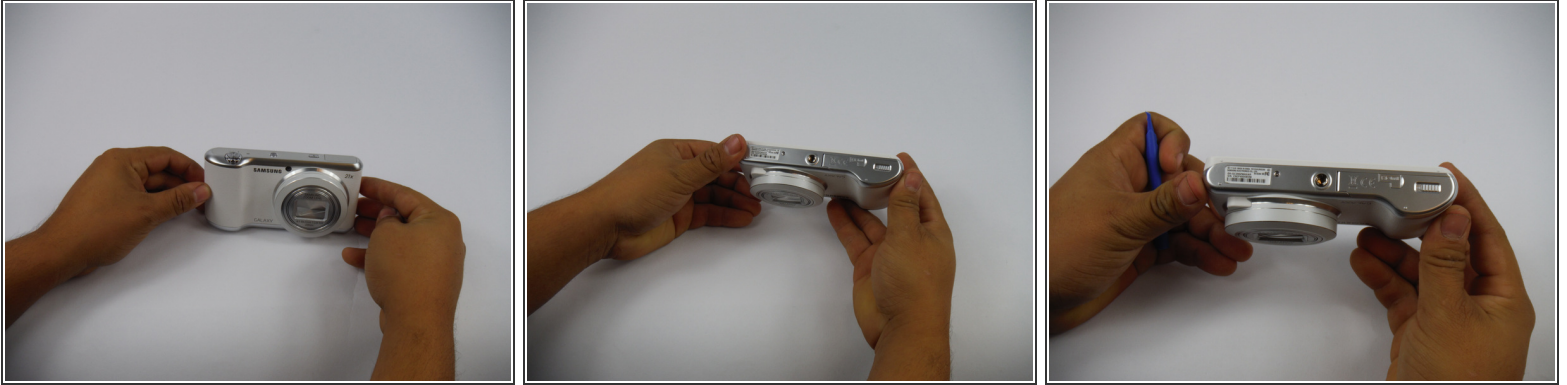

- Face the camera towards you. Then turn it to where the battery door is facing up and on the right side.


## Step 2

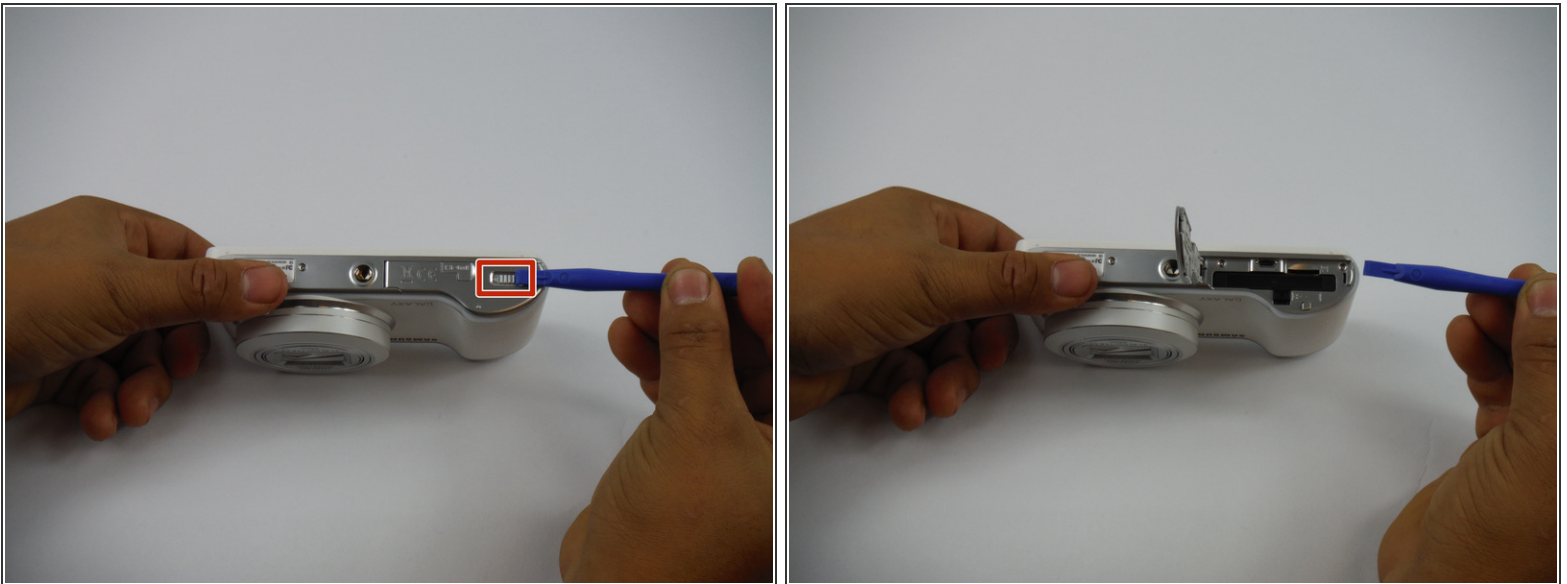

- Locate the small latch on the right side of the camera.
- Slide the latch to the left to open the battery door.




## Step 3

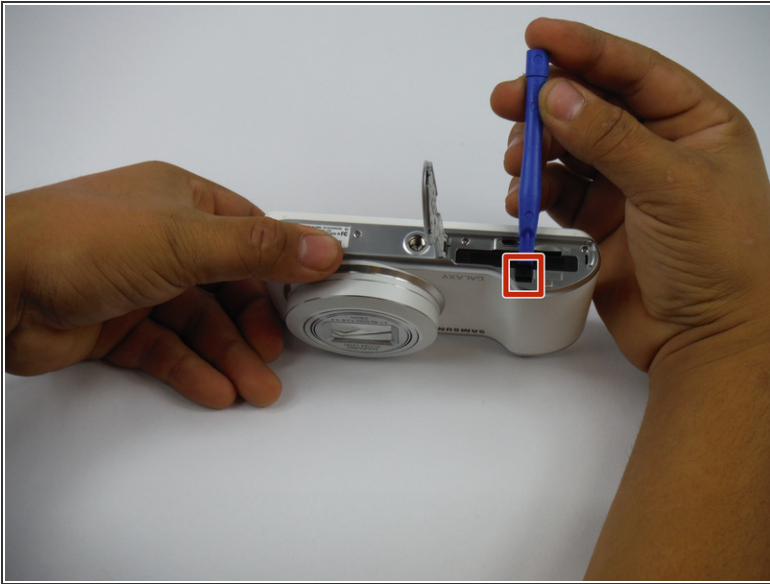


- Locate the battery, a black cell held in by a small clip (indicated by an outfacing arrow).
- Pull the clip toward you to release the battery.

## Step 4

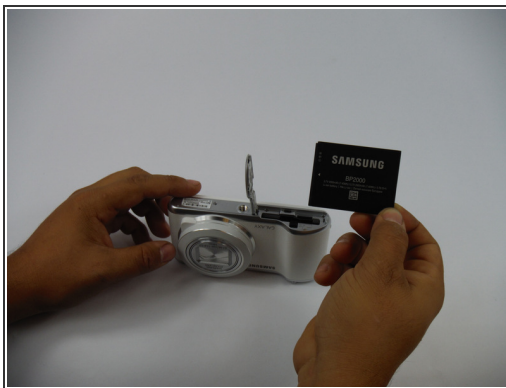

- Take the old battery out and discard accordingly.

## Step 5

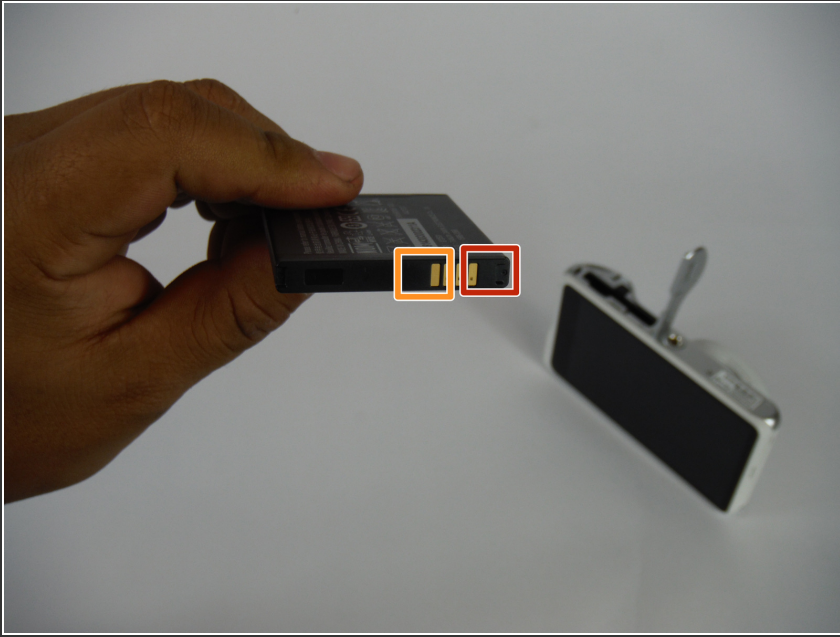

- To replace the battery, first locate the positive (red) and negative (orange) terminals displayed on the battery.
- Insert the battery by matching the terminals with the battery compartment in the camera using the small icon to indicate the correct orientation.


## Step 6



- After the battery is inserted, close the outer door and slide the latch towards to the right to close the door.



## Step 7 — Screen

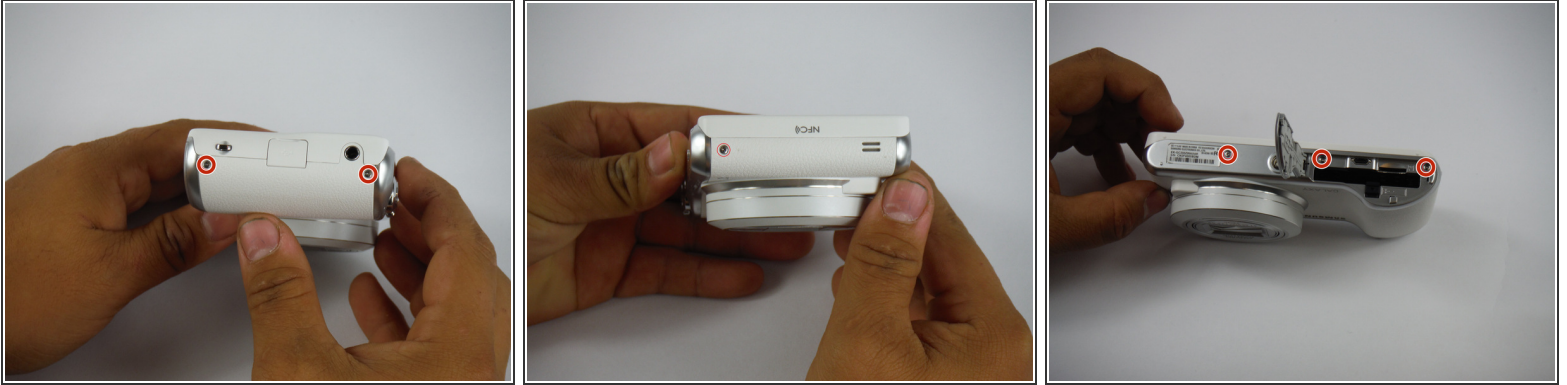

- While holding the camera, take note of each screw holding the screen to the main chassis of the camera.
- Hold the camera upright and lens facing towards you. There are a total of six 4mm PH00 screws to undo - two on the left, one screw on the right, and three along the bottom. Two of them are hidden behind the battery compartment door.

## Step 8




- Use the screwdriver to remove screws listed in step 2. There are a total of six 4mm screws.

## Step 9



- With the screws removed, use the plastic opening tool to gently pry the screen away from the main camera chassis. The ideal spot to start is at the corner with the headphone jack, as indicated in the picture.
- Once this side is free, gently work your way along the edge, all the way around the camera body.

## Step 10



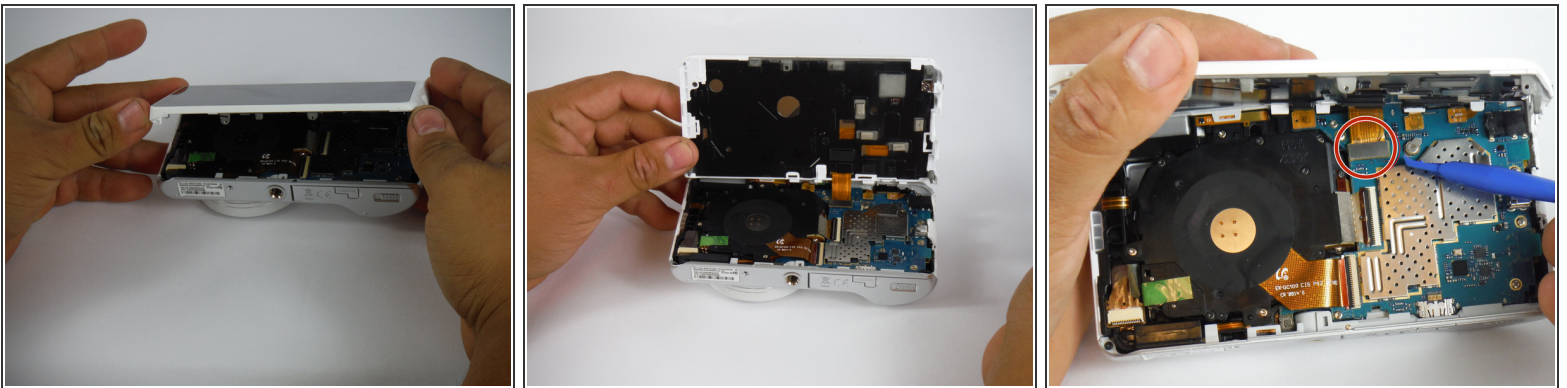


- With the screen freed, gently lay the camera on its face, so that the battery compartment faces up. Use both hands to lift the screen up and away.

 **The screen is still attached** to the motherboard by a ribbon cable. **Be Gentle** as it's very fragile.



## Step 11

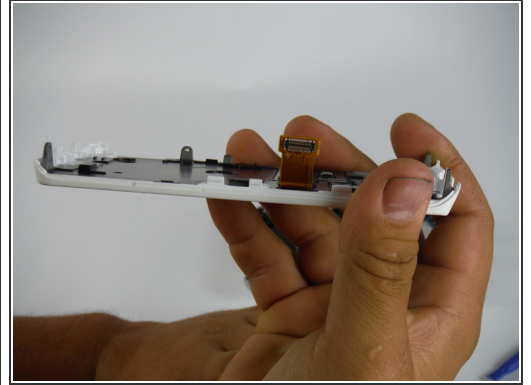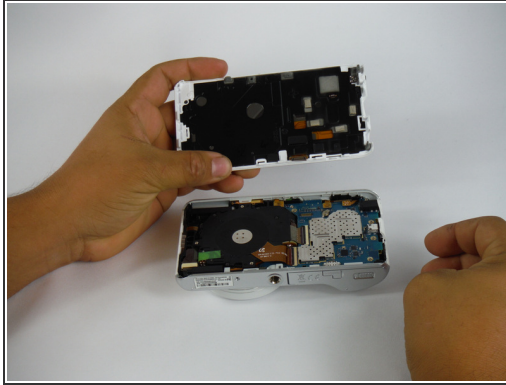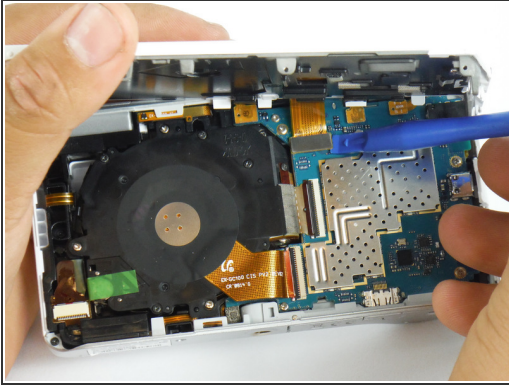

- With the screen separated from the main chassis, use the plastic opening tool to gently pry the edge of the ribbon cable connector from the motherboard.

## Step 12 — Screen Separated



**i** Now the screen is removed.

- Set the body aside in a safe place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-25 07:44:50 AM.